



ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS LAMP SHOULD TAKE APPROXIMATELY 5 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER AND DRILL.

UNPACK THE FIXTURE: YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FINIAL, RUBBER WASHER, SHADE, HARP, FIXTURE ASSEMBLY, (2) CORD COVERS AND CHANNEL. TO PROTECT THE FINISHES, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE: MOUNTING PLATE, GREEN GROUND SCREW, (2) 8-32 x 1-1/2" SCREWS, (2) NUTS, (4) PLASTIC ANCHORS, (4) WOOD SCREWS AND (2) BALL FINIALS.

IF FASTENING WITH ANCHOR TO DRYWALL

1. REMOVE MONTING PLATE FROM FIXTURE ASSEMBLY BY UNSCREWING (2) BALL FINIALS.
2. POSITION THE MOUNTING PLATE ON THE WALL AT DESIRED LOCATION AND MARK THE PLACE FOR THE ANCHORS TO BE INSTALLED.
3. DRILL PILOT HOLES ON THE MARKED SPOTS AND INSERT PLASTIC ANCHORS. (IF FASTENING WITH WOOD SCREWS TO STUD, SKIP THIS STEP)
4. ATTACH THE MOUNTING PLATE TO THE ANCHORS OR THE SPOTS THAT YOU MARKED ON STUD AND SECURE WITH (2) WOOD SCREWS.
5. RAISE FIXTURE TO WALL, LINE UP MOUNTING SCREWS WITH HOLES IN BACKPLATE AND SECURE WITH (2) BALL FINIALS.

FIXTURE ASSEMBLY

1. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE TWO ENDS INTO CUP.
2. PLACE SHADE ONTO THE HARP, THEN SECURE WITH RUBBER WASHER AND FINIAL.
3. INSTALL A 100 WATT MAX. MEDIUM BASE TYPE "A" 3-WAY BULB (NOT INCLUDED) INTO SOCKET.
4. TO INSTALL CORD COVER, MOUNT CHANNEL ON THE WALL WITH SCREWS AND ANCHORS. (SEE ABOVE) WITH CORD BEHIND COVERS, PRESS CORD COVERS ONTO CHANNEL.
5. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.

