


Step 1


Install the 2 metal brackets to the bottom of the metal shelf with the 4 large sheet metal screws.

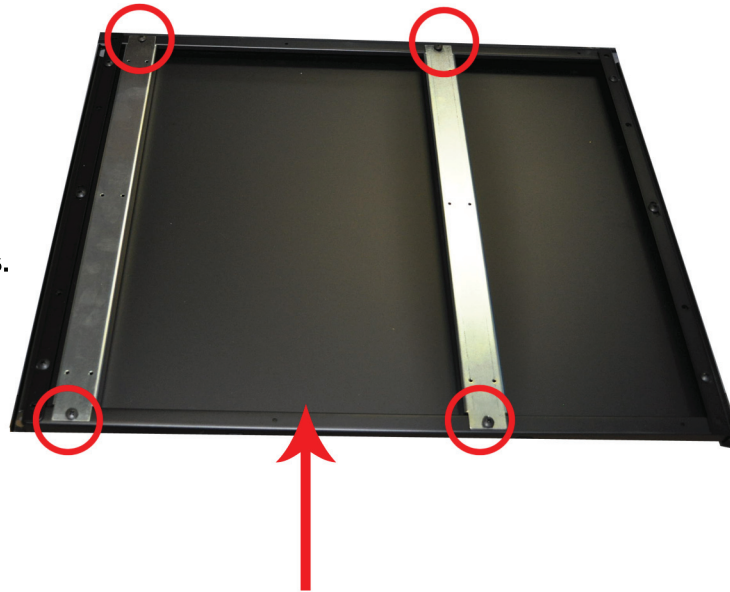

Front of Shelf

Step 2


Install the 4 short metal L brackets to the long metal brackets with 2 short sheet metal screws per bracket.

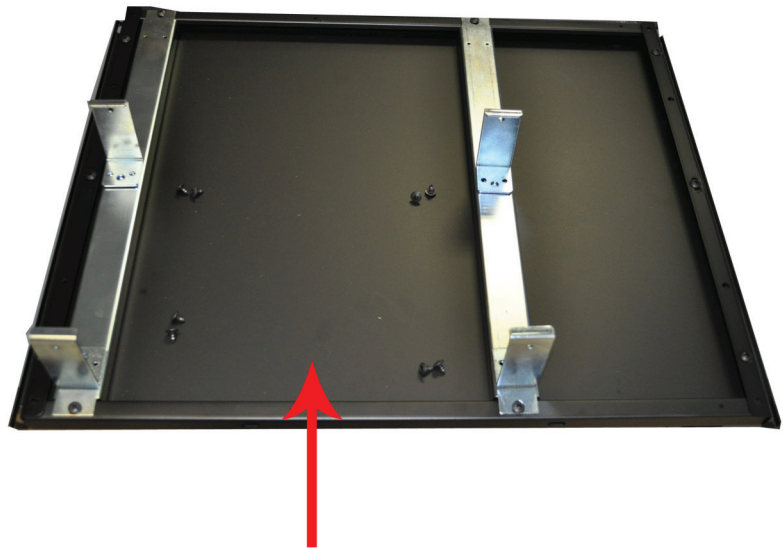

Front of Shelf

Step 3

Extend the mouse tray and place it between the L brackets. Using the 4 machine screws, install the tray to the L brackets.

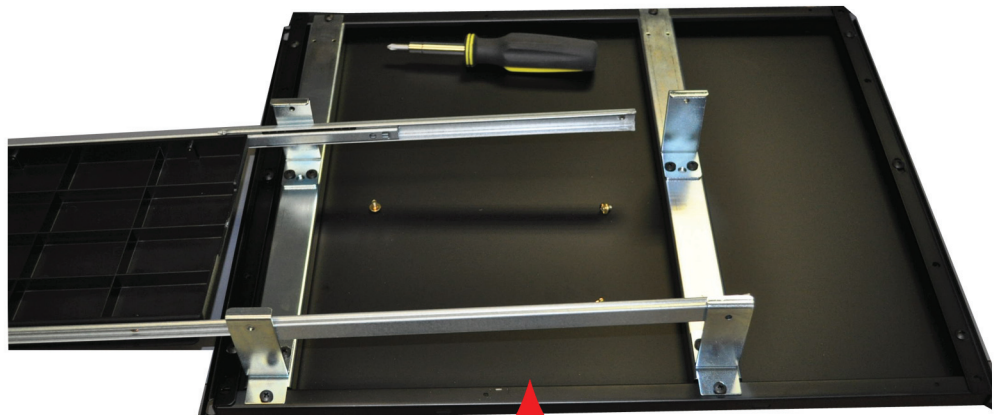

Front of Shelf

Step 4

The EMS mouse tray is now attached to the pull out shelf. Continue following the instructions for attaching the pull out shelf to the cart.

