



# NET SERIES MODELS NB-3/4/5 & NB-3G/4G/5G

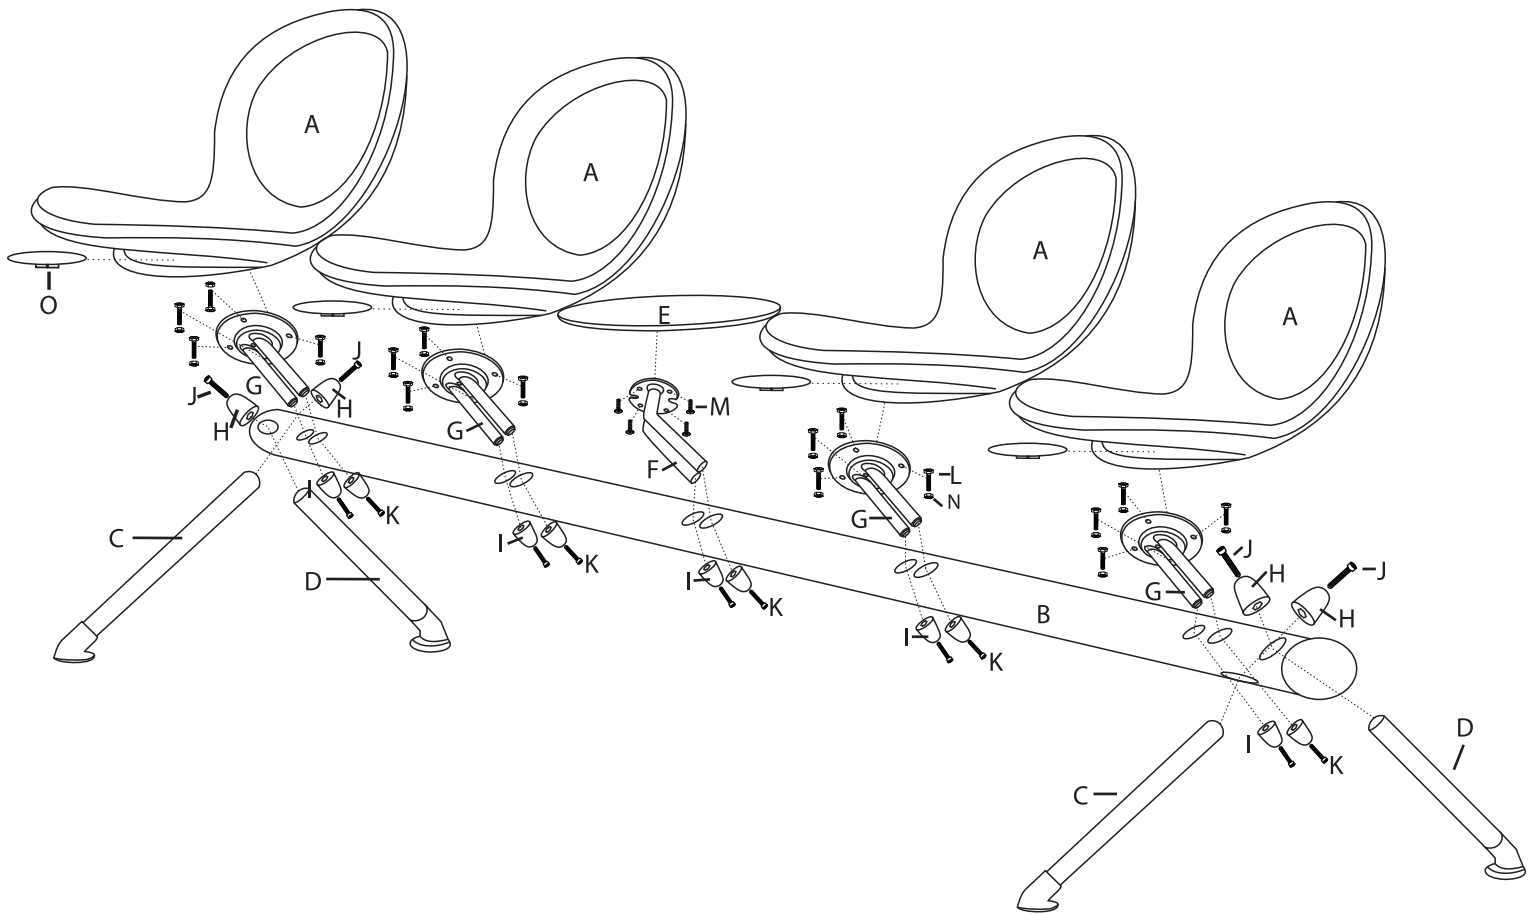


# NET SERIES MODELS NB-3/4/5 & NB-3G/4G/5G

## PARTS LIST:

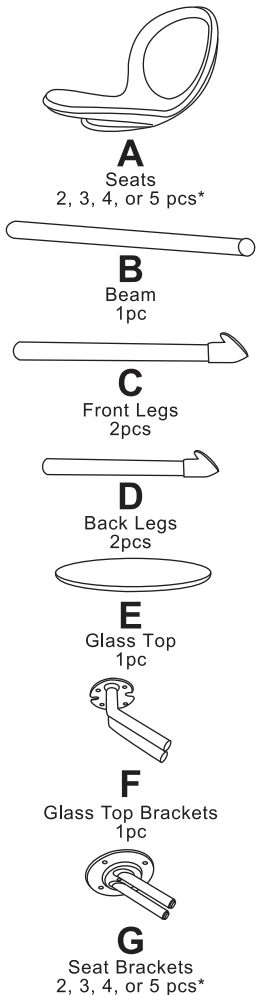

## HARDWARE:

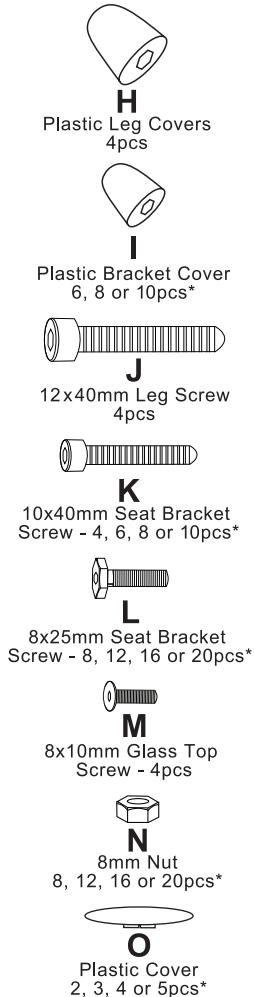


## ASSEMBLY INSTRUCTIONS:

- Step 1: Insert Front Legs (C) and Back Legs (D) into Beam (B) and attach using 12x40mm Screws (J); Use Plastic Leg Covers (H) to cover the holes in the Beam.
  - Step 2: Insert Seat Brackets (G) into Beam (B) and attach using 10x40mm Screws (K); use Plastic Bracket Covers (I) to cover the holes in the Seat Brackets (G).
  - Step 3: Insert Glass Top Bracket (F) into Beam (B) and attach using 10x40mm Screws (K); use Plastic Bracket Covers (I) to cover the holes in the Glas Top Brackets (F).
  - Step 4: Align Seats (A) with Seat Brackets (G) and attach using 8x25mm Screws (L) and 8mm Nuts (N).
  - Step 5: Align Glass Top (E) with Glass Top Bracket (F) and attach using 8x10mm Screws (M).
  - Step 6: Align Plastic Cover (O) and press to attach.
- Please disregard steps 3 & 5 if your product does not have a Glass Top.

\*Quantity equal to seat/table configuration.

## TOOLS INCLUDED:

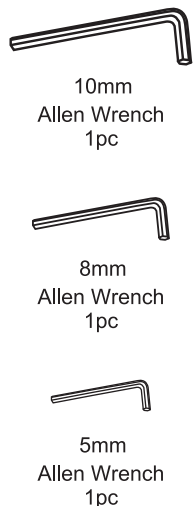

**ofm**  
Furniture For The Real Office™

Holly Springs, NC 27540  
800-520-7471 (voice)  
919-303-6389 (voice)  
919-362-4762 (voice)  
support@ofmnc.com  
www.ofmnc.com