


INSTALLATION INSTRUCTIONS FOR 120 or 130 TYPE COLLECTION BOX (RECESSED)

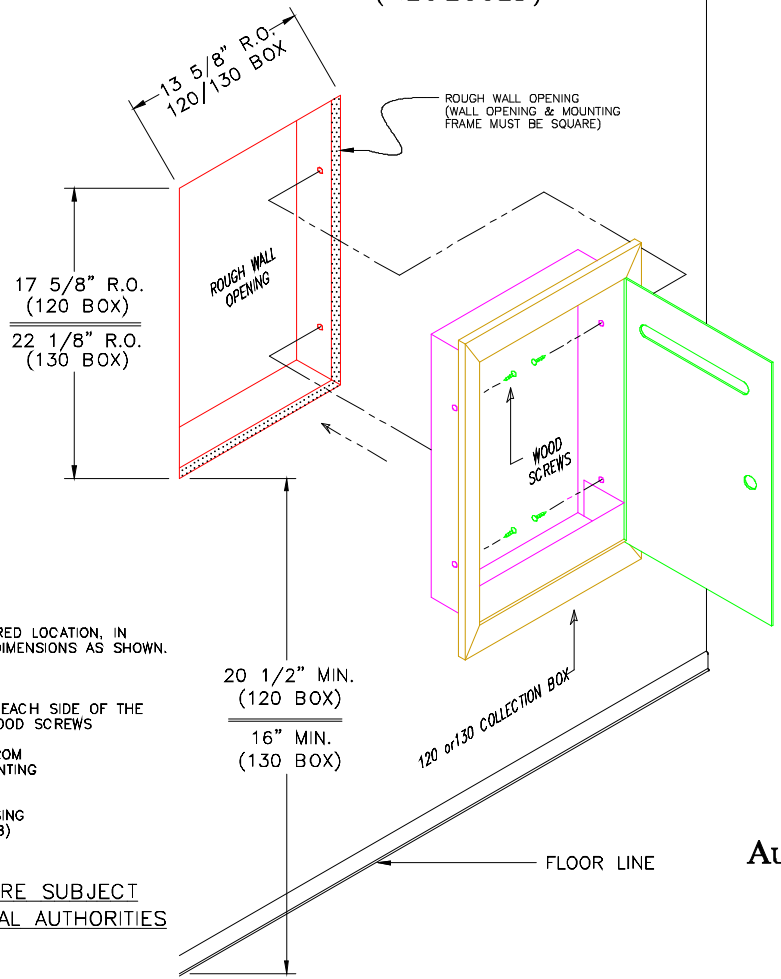

INSTALLATION NOTES FOR 130R & 120R

1. CUT AN OPENING IN THE WALL, AT A DESIRED LOCATION, IN ACCORDANCE WITH THE ROUGH OPENING DIMENSIONS AS SHOWN.
2. INSERT COLLECTION BOX INTO OPENING
3. DRILL (2) HOLES THROUGH THE HOLES IN EACH SIDE OF THE BOX INTO THE FRAME OPENING FOR #8 WOOD SCREWS
4. IF REQUIRED, REMOVE COLLECTION BOX FROM OPENING AND INSTALL ANCHORS INTO MOUNTING HOLES.
5. MOUNT COLLECTION BOX INTO OPENING USING (4) 8 1-1/4" WOOD SCREWS. (P/N 51298)

USE OF COLLECTION BOXES ARE SUBJECT TO APPROVAL OF LOCAL POSTAL AUTHORITIES

AUTH *AF* FLORENCE
 MANUFACTURING COMPANY
 6936 CORPORATE DRIVE
 MANHATTAN KANSAS 66503