




FVN8058 & FVN8090
ALTO & VISTA
INSTALLATION GUIDE


FRESCA™

Medicine Cabinet

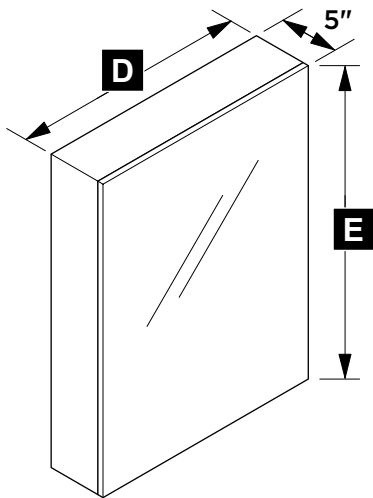

FVN8058

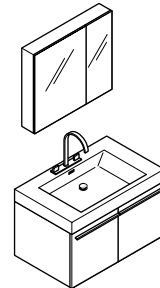


FVN8090


Model	Vanity Width A	Vanity Depth B	Vanity Height C
FVN8058	23"	19-3/4"	25-3/4"
FVN8090	35-1/4"	18-1/2"	21-3/4"

Model	Medicine Cabinet D	Medicine Cabinet E
FVN8058	19-3/4"	26"
FVN8090	29-3/4"	26"


Vanity Front

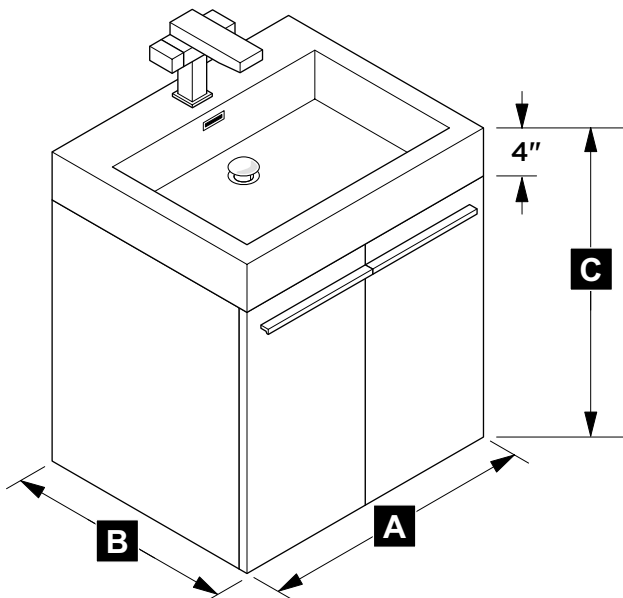







Vanity Back

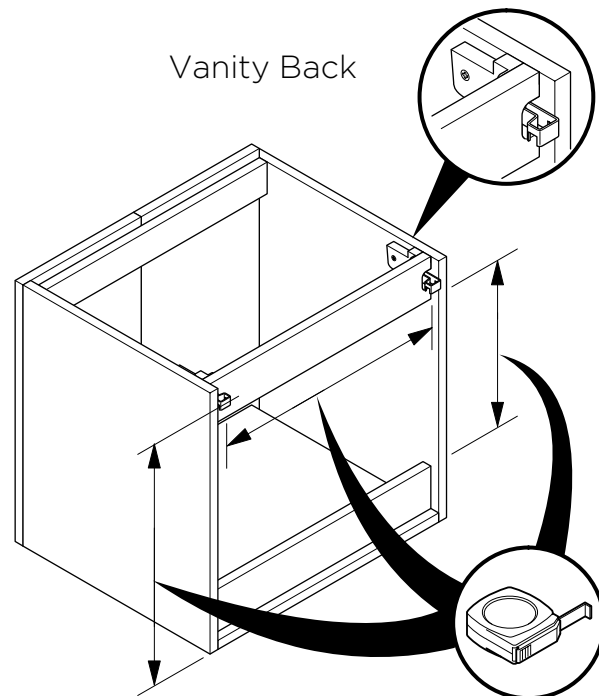

TOOLS FOR ASSEMBLY

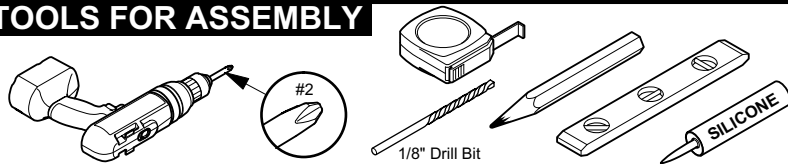


PARTS

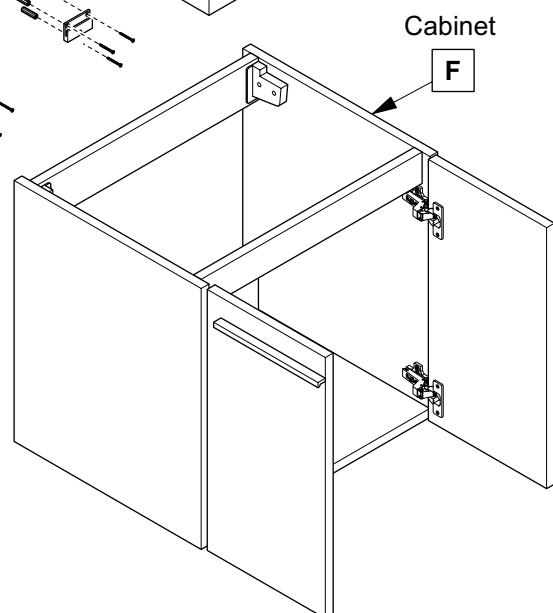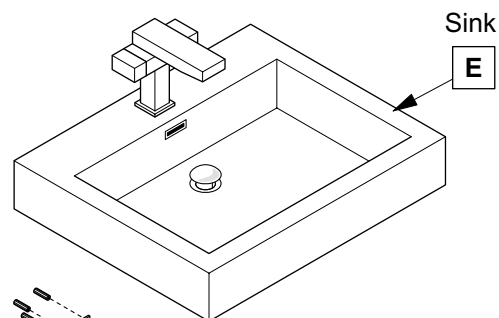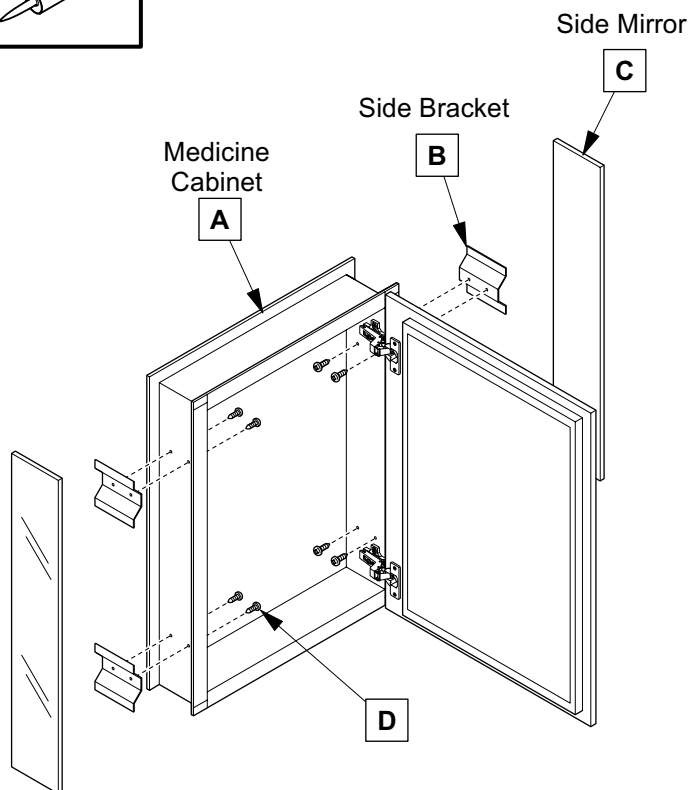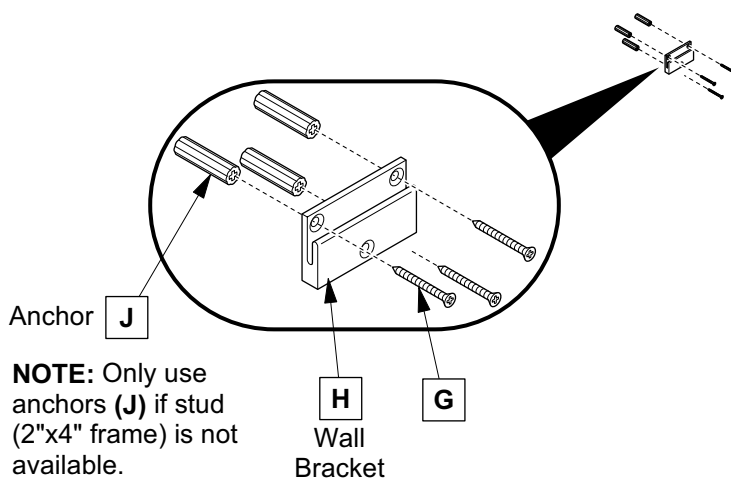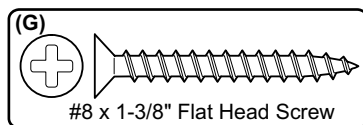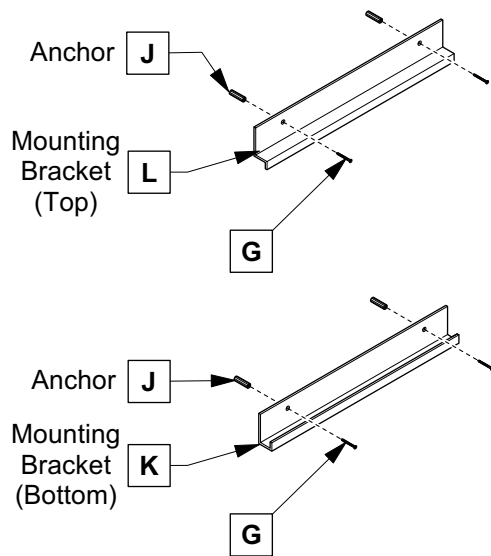

1




Locate cabinet (C) & mark location

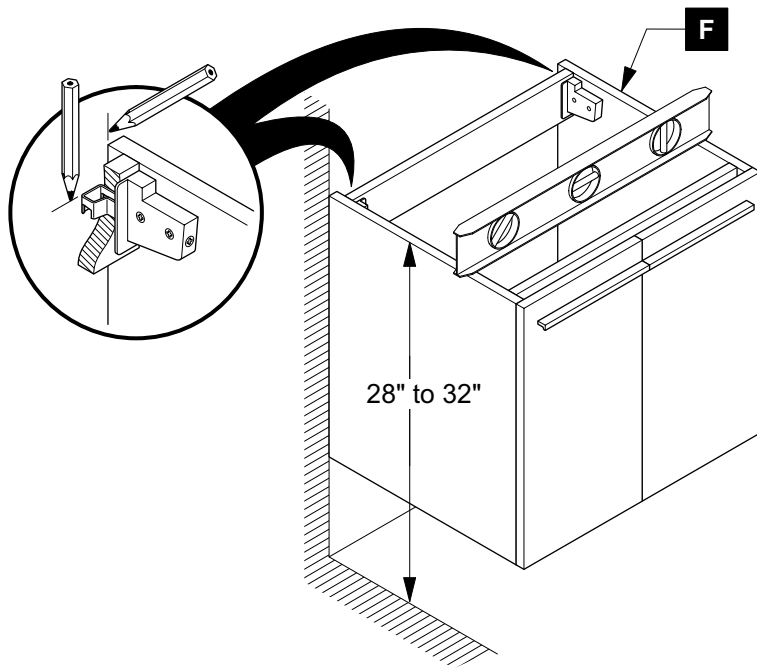

2


Install wall brackets (J)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

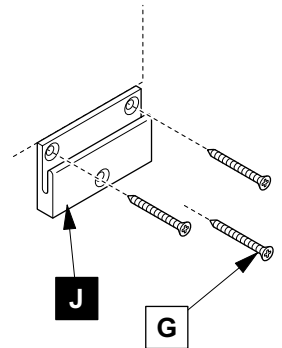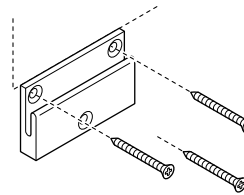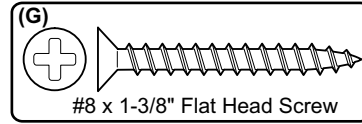


3

Apply silicone and install cabinet (F)

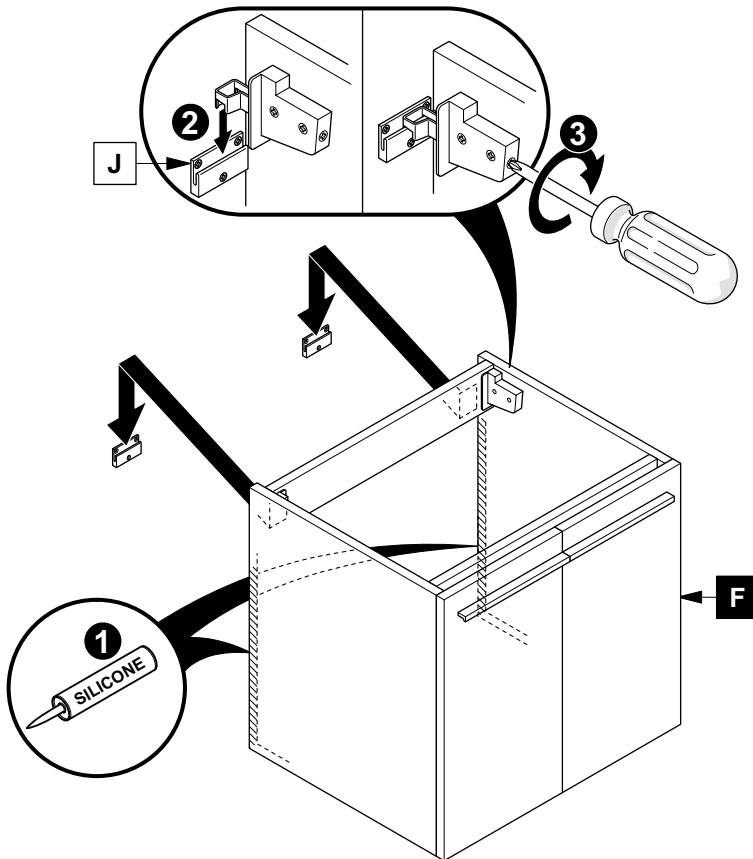

4

Apply silicone and install sink (E)

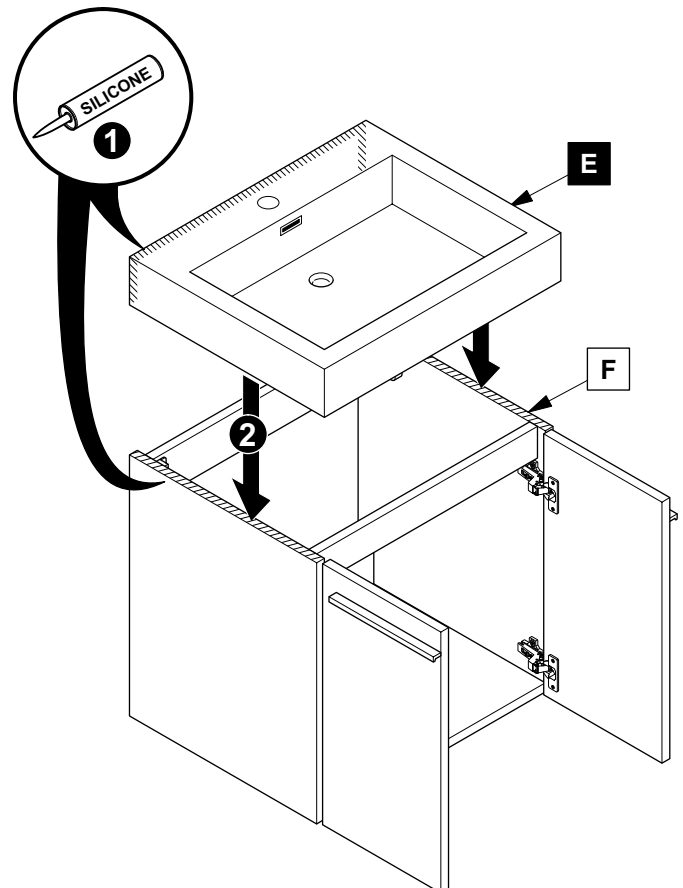



MEDICINE CABINET INSTALLATION

2

Install side mirrors (C)


1

Install side brackets (B)

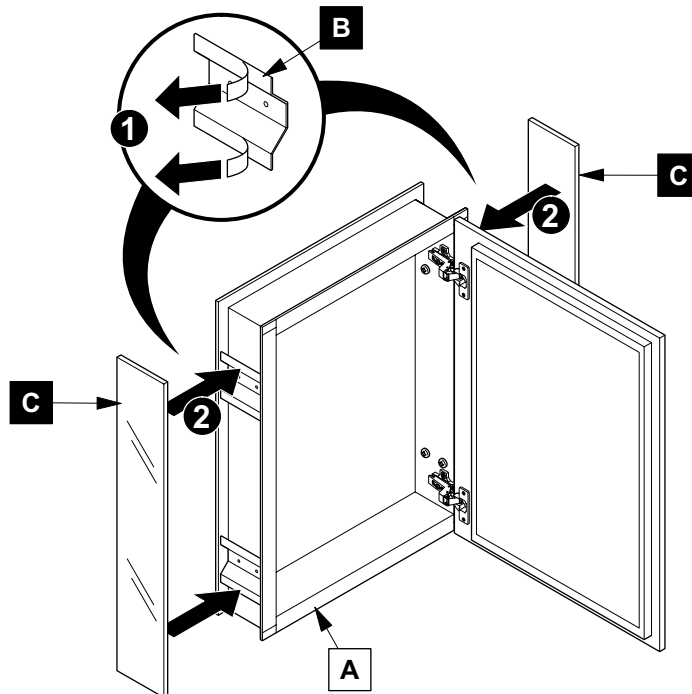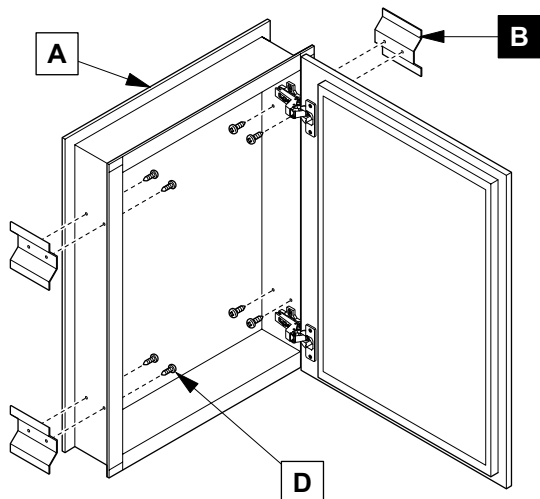


3

Mark cabinet (A) location

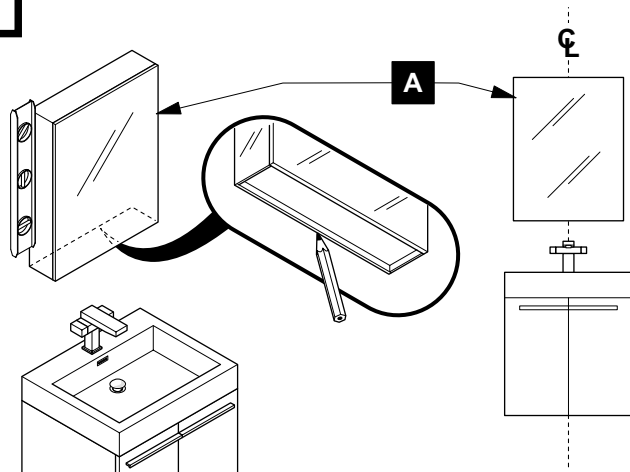

5

Install cabinet (A)

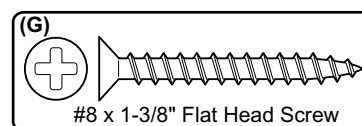

4

Install bottom bracket (K)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

